

# Poly-carbonmonofluoride (BR Series) and Manganese Dioxide (CR Series)

## COIN CELL TAB CONFIGURATIONS

| Model Number   | Tab Type             |                         | Configuration Diagram No. |
|----------------|----------------------|-------------------------|---------------------------|
|                | With Insulation Wrap | Without Insulation Wrap |                           |
| <b>BR TYPE</b> |                      |                         |                           |
| BR1220         | /1HF                 | /1HE                    | 1                         |
| BR1220         | /1VC                 | /1VB                    | 2                         |
| BR1225         | /1HC                 | /1HB                    | 3                         |
| BR1225         | /1VC                 |                         | 4                         |
| BR1632         | /1HF                 |                         | 5                         |
| BR2016         | /1F2                 |                         | 6                         |
| BR2032         | /1HM                 |                         | 7                         |
| BR2032         |                      | /1HG                    | 8                         |
| BR2032         | /1HS                 | /1HSE                   | 9                         |
| BR2032         | /1GUF                | /1GU                    | 10                        |
| BR2032         | /1HF                 | /1HE                    | 11                        |
| BR2032         |                      | /1VB                    | 12                        |
| BR2032         | /1GVF                | /1GV                    | 13                        |
| BR2032         | /1F4                 |                         | 14                        |
| BR2032         | /1F2                 |                         | 15                        |
| BR2325         | /1HC                 | /1HB                    | 16                        |
| BR2325         | /1HM                 |                         | 17                        |
| BR2325         |                      | /1HG                    | 18                        |
| BR2325         | /2HC                 |                         | 19                        |
| BR2325         |                      | /1VG                    | 20                        |
| BR2330         | /1HF                 | /1HE                    | 21                        |
| BR2330         | /1GUF                | /1GU                    | 22                        |
| BR2330         | /1VC                 | /1VB                    | 23                        |
| BR2330         | /1GVF                | /1GV                    | 24                        |
| BR2330         | /1F3                 |                         | 25                        |
| BR2330         | /1F4C                |                         | 26                        |
| BR3032         | /1VC                 |                         | 27                        |
| BR3032         | /1F2                 |                         | 28                        |

| Model Number   | Tab Type             |                         | Configuration Diagram No. |
|----------------|----------------------|-------------------------|---------------------------|
|                | With Insulation Wrap | Without Insulation Wrap |                           |
| <b>CR TYPE</b> |                      |                         |                           |
| CR1220         | /1HF                 | /1HE                    | 1                         |
| CR1220         | /1VC                 | /1VB                    | 2                         |
| CR1616         |                      | /1F2                    | 29                        |
| CR1632         | /1HF                 |                         | 5                         |
| CR1632         |                      | /1HE                    | 30                        |
| CR2016         | /1F2                 |                         | 6                         |
| CR2025         | /1F2                 |                         | 31                        |
| CR2032         |                      | /1HU3                   | 32                        |
| CR2032         | /1VS1                |                         | 33                        |
| CR2032         |                      | /1HG                    | 8                         |
| CR2032         | /1HS                 | /1HSE                   | 9                         |
| CR2032         | /1GUF                | /1GU                    | 10                        |
| CR2032         | /1HF                 | /1HE                    | 11                        |
| CR2032         |                      | /1VB                    | 12                        |
| CR2032         | /1GVF                | /1GV                    | 13                        |
| CR2032         | /1F4                 |                         | 14                        |
| CR2032         | /1F2                 |                         | 15                        |
| CR2330         | /1HF                 | /1HE                    | 21                        |
| CR2330         | /1GUF                | /1GU                    | 22                        |
| CR2330         | /1VC                 | /1VB                    | 23                        |
| CR2330         | /1GVF                | /1GV                    | 24                        |
| CR2330         | /1F3                 |                         | 25                        |
| CR2330         | /1F4C                |                         | 26                        |
| CR2354         | /1HF                 | /1HE                    | 34                        |
| CR2354         | /1GUF                | /1GU                    | 35                        |
| CR2354         | /1VC                 | /1VB                    | 36                        |
| CR3032         | /1VC                 |                         | 27                        |
| CR3032         | /1F2                 |                         | 28                        |
| CR2477         | /1VC                 | /1VB                    | 37                        |
| CR2477         | /1HF                 | /1HE                    | 38                        |
| CR2450         | /H1A                 |                         | 39                        |
| CR2450         | /G1A                 |                         | 40                        |

\* Refer to page 60 for BR "A" (High Temp) Tab configurations. Please contact Panasonic for requests on custom Tab configurations. Minimum order requirements may apply

# BR & CR Series Coin Cell Tab Configurations

## DIMENSIONS / MM (INCH)

| Model No.            | Dimensions/mm (inch) | Model No.            | Dimensions/mm (inch) |
|----------------------|----------------------|----------------------|----------------------|
| BR/CR1220/1HF<br>1HE | <p>①</p>             | BR/CR1220/1VC<br>1VB | <p>②</p>             |
| BR1225/1HC<br>1HB    | <p>③</p>             | BR1225/1VC           | <p>④</p>             |
| BR/CR1632/1HF        | <p>⑤</p>             | BR/CR2016/1F2        | <p>⑥</p>             |
| BR2032/1HM           | <p>⑦</p>             | BR/CR2032/1HG        | <p>⑧</p>             |

# BR & CR Series Coin Cell Tab Configurations

## DIMENSIONS / MM (INCH) cont.

| Model No.             | Dimensions/mm (inch) | Model No.             | Dimensions/mm (inch) |
|-----------------------|----------------------|-----------------------|----------------------|
| BR/CR2032/1HS<br>1HSE |                      | BR/CR2032/1GUF<br>1GU |                      |
| BR/CR2032/1HF<br>1HE  |                      | BR/CR2032/1VB         |                      |
| BR/CR2032/1GVF<br>1GV |                      | BR/CR2032/1F4         |                      |
| BR/CR2032/1F2         |                      | BR2325/1HC<br>1HB     |                      |



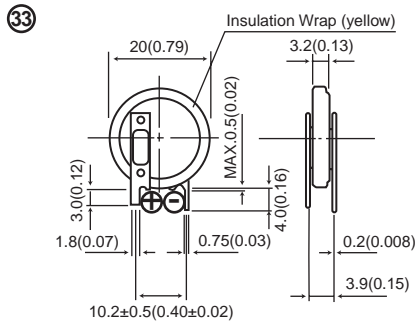
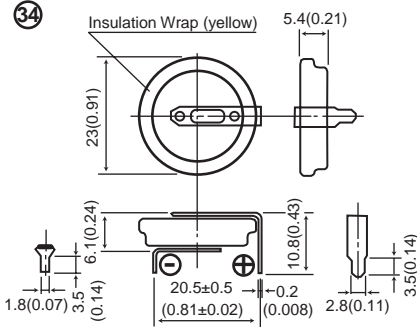
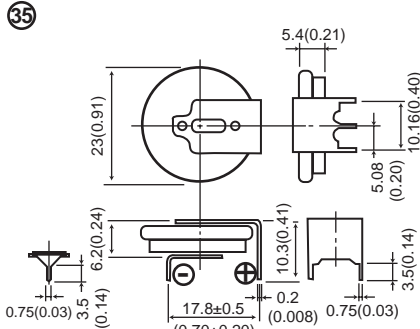
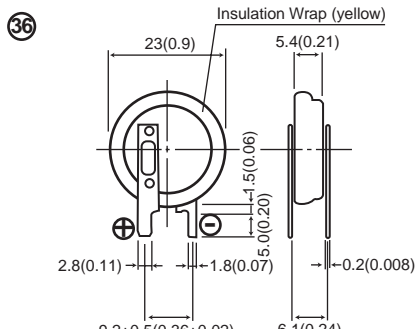
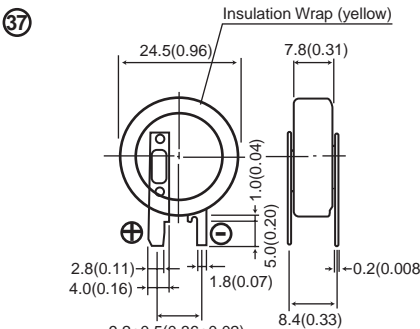
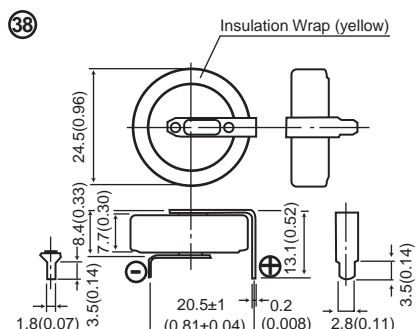
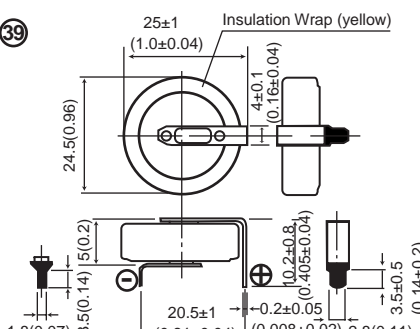
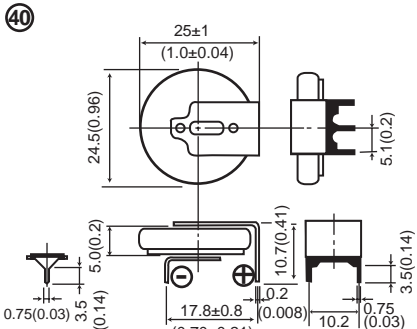
# BR & CR Series Coin Cell Tab Configurations

## DIMENSIONS / MM (INCH) cont.

| Model No.     | Dimensions/mm (inch) | Model No.      | Dimensions/mm (inch) |
|---------------|----------------------|----------------|----------------------|
| BR/CR2330/1F3 |                      | BR/CR2330/1F4C |                      |
| BR/CR3032/1VC |                      | BR/CR3032/1F2  |                      |
| CR1616/1F2    |                      | CR1632/1HE     |                      |
| CR2025/1F2    |                      | CR2032/1HU3    |                      |

# BR & CR Series Coin Cell Tab Configurations

## DIMENSIONS / MM (INCH) cont.

| Model No.          | Dimensions/mm (inch)  | Model No.         | Dimensions/mm (inch)  |
|--------------------|---|-------------------|---|
| CR2032/1VS1        |    | CR2354/1HF<br>1HE |    |
| CR2354/1GUF<br>1GU |   | CR2354/1VC<br>1VB |   |
| CR2477/1VC<br>1VB  |  | CR2477/1HF<br>1HE |  |
| CR2450/H1A         |  | CR2450/G1A        |  |